

BRAUN




FreeControl




1775



Type 5729

www.braun.com/register

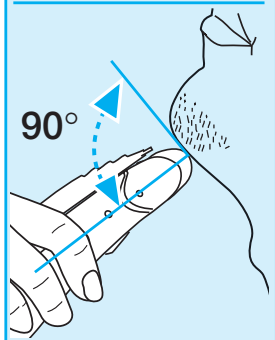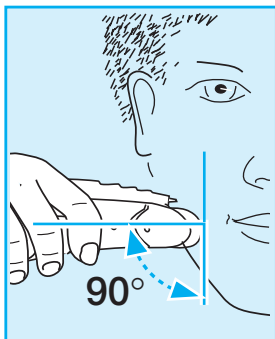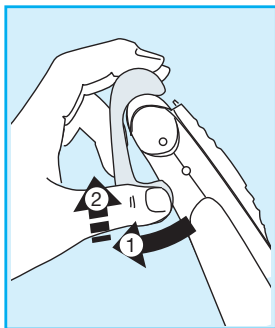

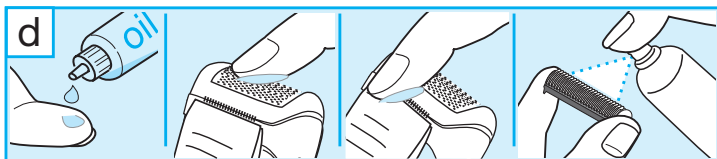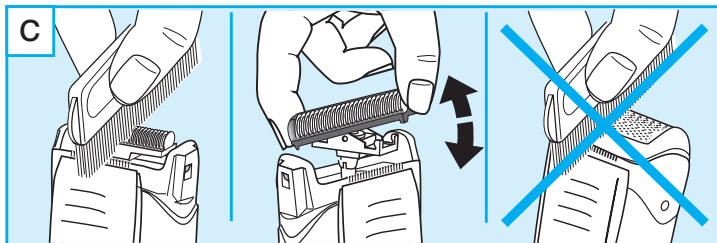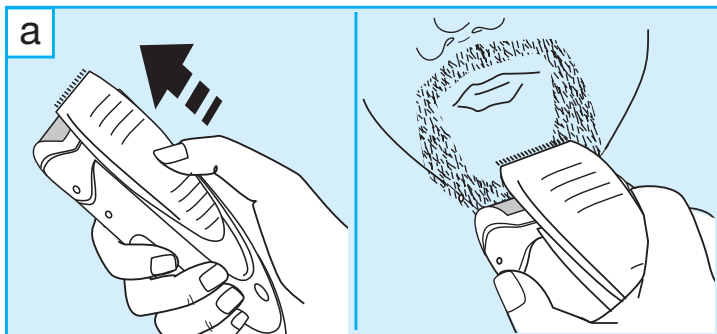

한국어

본 제품은 브라운의 엄격한 품질, 기능 및 디자인 기준하에 생산된 제품입니다. 브라운 제품의 구입에 감사드리며 본 제품을 사용하기 전에 반드시 사용 설명서를 읽어 주십시오.

주의사항

본 제품은 안전 저전압 전원 장치가 갖추어진 전용 코드세트가 들어 있습니다. 어떤 부품도 함부로 바꾸거나 조작하지 마십시오. 감전의 위험이 있습니다.

각부의 명칭

- 1 면도망 보호캡
- 2 면도망
- 3 면도날
- 4 긴 수염 정리용 트리머
- 5 충전 표시등
- 6 On/Off 스위치
- 7 전용 코드 세트

면도기 충전 방법

충전을 위한 주변의 최적 온도는 15°C에서 35°C입니다.

- 면도기의 전원을 반드시 끈 상태로 전용코드세트를 이용해서 면도기를 전원에 연결합니다.
- 처음으로 충전할 때 최소한 4시간 이상 충전하십시오. 충전 표시등(5)이 켜져 있으면 면도기가 충전중임을 나타냅니다. 면도기가 완전히 충전되면 충전등이 간헐적으로 깜빡이는데, 이것은 충전지가 최대 용량을 유지하고 있음을 나타냅니다.
- 완전 충전된 면도기는 약30분 정도 사용이 가능하지만 수염이 난 면적에 따라 개인차가 있을 수 있습니다.
- 완전히 충전된 면도기는 사용하면서 자연히 방전 됩니다. 더 이상 작동하지 않으면 충전하십시오. 완전 충전을 위해 1시간 정도 소요됩니다.
- 보통 배터리 용량은 몇 번의 충전과 방전을 반복한 후에 최대화됩니다.
- 방전된 경우 미리 충전하지 않았더라도 전용 코드를 전원에 연결한 상태로 사용하실 수 있습니다.

면도

면도망 보호캡(1)을 벗깁니다. 면도기의 전원(6)을 켭니다.

쿠션감 있는 면도망이 피부에 밀착해 깔끔하고 부드러운 밀착 면도를 가능하게 해줍니다.

머칠 동안 면도를 하지 않은 경우에는 면도 전에 긴 수염 정리용 트리머(4)를 사용해서 긴 수염을 먼저 잘라준 후 면도망을 사용해 면도하면 최고의 면도 효과를 보실 수 있습니다.

수염 정리

긴 수염정리용 트리머(a)를 사용해서 코밑 수염이나 구렛나루를 정리하실 수 있습니다. 넓게 분포된 털들을 평평하게 잘라 정리해 줍니다. 특히 구레나루, 턱수염 등을 밀 때, 혹은 수염의 일부만 남겨서 모양을 만들고자 할 때 사용하십시오.

짧은 트리머의 사용은 배터리 용량을 감소시킬 수도 있습니다.

완벽한 면도를 위한 제안

- 세안 전에 면도하십시오. 세안 후에는 피부가 수분을 머금어 약간 부풀어 오르는 경향이 있습니다.
- 면도기는 피부와 90° 각도로 사용하십시오. 피부를 곧게 편 상태에서 수염이 자란 반대방향으로 면도하십시오.
- 완벽한 면도를 위하여 면도망과 날은 18개월마다, 혹은 부품이 닳는 대로 교체해 주십시오.

청소



이 제품은 흐르는 물에서 손쉽게 세척할 수 있습니다.

경고: 청소 전에 손잡이 부분을 전원과 분리하십시오.

정기적인 청소는 면도 성능을 향상시킵니다. 매번 면도한 후 흐르는 따뜻한 물에 면도기 헤드를 행구어 주시면 면도기를 깨끗하게 관리하실 수 있습니다.

- 면도기의 스위치를 켜고 면도기 헤드를 흐르는 따뜻한 물에 행구십시오(b). 입자나 연마제가 들어 있지 않은 자연 친화적인 비누라면 사용하셔도 됩니다. 거품을 모두 행군 후에 면도기를 수초간 작동시키십시오.
- 다음 면도기 스위치를 끄고 면도 망과 면도날을 당겨서 꺼냅니다. 분리된 면도 부품들을 말려 주십시오.

제공된 솔을 사용해서도 면도기를 청소하실 수 있습니다.(c):

- 면도기 스위치를 끄십시오. 면도 망을 빼내십시오.
- 솔을 사용해서 면도날과 면도기 헤드의 내부를 청소하십시오. 면도 망은 솔로 청소하지 마십시오. 면도 망이 손상될 수 있습니다.

면도기를 최상의 상태로 유지하려면

가끔 긴 수염 정리용 트리머와 면도망에 윤활유를 한 방울 떨어뜨려 주십시오(d).

면도기 부품의 교환

면도망과 면도날을 18개월마다 또는 부품이 닳는 대로 교체하시면 새 것 같은 성능으로 돌아옵니다. 두 가지 부품을 동시에 교체하면 피부 자극을 줄이고 좀 더 깔끔한 면도를 하실 수 있습니다. (면도 망과 면도날: 1000 시리즈)

배터리 관리

충전용 배터리의 최대 용량을 유지하기 위해 면도기를 사용해서 6개월에 한 번씩 완전히 방전시키십시오. 그리고 나서 면도기를 완전히 재충전하십시오. 면도기를 50°C 이상 온도에 장시간 노출하지 마십시오.

환경보호 주의사항

본 제품에는 니켈 하이브리드 충전용 배터리가 들어 있습니다. 환경보호를 위하여 수명이 다한 후에도 일반쓰레기와 함께 버리지 마십시오. 설명서 뒷부분의 그림과 같이 덮개를 열고 배터리를 제거해서 구입처나 거주지 환경 규정에 따라 지정된 수집 장소에 버려 주십시오.

정기적으로 전기코드의 손상 여부를 점검하시고, 손상되었거나 작동이 안될 경우 위험하니 더 이상 사용하지 마십시오. 손상된 코드는 가까운 브라운서비스센터 (대우전자서비스 1588-1588)로 문의해 주십시오.

제조일시를 확인하기 위해서는 제품 하단 코드 접합부의 로트번호를 참고하시기 바랍니다.
첫자리는 제조년도의 마지막 숫자를 나타내며, 다음 두 자리 숫자는 제품이 생산된 주를 표시합니다.
예 : 429-이 제품은 2004년 29주차에 생산된 제품입니다.

본 설명서는 사전 예고 없이 변경될 수 있습니다.

본 제품은 EMC 89/336/EEC 지침과 저전압 규정 73/23/EEC를 따르고 있습니다.



품질 보증

- 본 제품은 **구입일로부터 1년간** 품질을 보증합니다.
- 1년간의 품질 보증기간 동안 제품 자체나 생산과정에서 비롯된 불량품은 상태에 따라 무료보수 또는 교환해 드립니다.
- 보증기간 내이라도 소비자의 귀책사유에 의한 파손 (전압을 잘못 사용한 경우, 부적절한 전원 플러그에 연결한 경우, 사용 중 파손 등), 정상적인 마모, 사용에 지장이 없는 경미한 결함 등은 무상수리 또는 교환이 적용되지 않습니다.
- 브라운 서비스 센터가 아닌 다른 곳에서 수리를 하였거나 브라운 정품이 아닌 부품을 사용하였을 경우에는 품질보증 대상에서 제외됩니다. 그리고 본 제품의 구입일자가 판매점에 의해 혹은 구입시의 영수증에 의해 확인되어야만 정상적인 품질 보증품으로 인정됩니다. **(구입시 영수증을 잘 보관하십시오)**
애프터 서비스 시 불이익이 없도록 하십시오.
- 애프터 서비스를 받으셨더라도 원래의 품질보증기간이 연장되는 것은 아닙니다.

브라운 제품의 보상기준은 재정경제부고시 소비자 피해보상규정에 따릅니다.
A/S 문의: 1588-1588
가까운 대우일렉 서비스 센터에서 A/S를 받으실 수 있습니다.

브라운제품:
전국 유명 백화점, 할인점, 양판점 및 전자상가에서 구입할 수 있습니다.
<http://www.braun.com>
<http://www.braun.co.kr>

품질보증서			
본 제품은 유효한 품질보증서와 검사용 기기를 제조·수입한 제품입니다. 이와 기재된 내용으로 품질을 보증합니다.			
제 품 명	모 델 명		
구 입 일	보증기간	구입일로부터 1년	
과	관	관	관
계	별	별	별
한국 피앤지 판매 (유) 서울지점: 02-417-0000 (주최) 02-417-0000 (주최) 전화: 02-417-0000 (주최) 02-417-0000 (주최)			

English

Our products are designed to meet the highest standards of quality, functionality and design. We hope you entirely enjoy your new Braun shaver.

Warning

Your shaver is provided with a special cord set with integrated Safety Extra Low Voltage power supply. Do not exchange or manipulate any part of it. Otherwise there is a risk of electric shock.

Description

- 1 Foil protection cap
- 2 Shaver foil
- 3 Cutter block
- 4 Long hair trimmer
- 5 Charging light
- 6 On/off switch
- 7 Special cord set

Charging

The best environmental temperature for charging is between 15 °C and 35 °C.

- Using the special cord set, connect the shaver to an electrical outlet with the motor switched off.
- When charging for the first time, leave the shaver to charge continuously for 4 hours. The charging light (5) shows that the shaver is being charged. When the battery is fully charged, the charging light intermittently blinks on and off. This indicates that the battery maintains its full capacity.
- A full charge provides up to 30 minutes of cordless shaving time depending on your beard growth.
- Once the shaver is completely charged, discharge the shaver through normal use. Then recharge to full capacity. Subsequent charges will take about 1 hour.
- Maximum battery capacity will only be reached after several charging/discharging cycles.
- If the rechargeable batteries are discharged, you may also shave by connecting the shaver to an electrical outlet via the special cord set.

Shaving

Remove the foil protection cap (1). Activate the on/off switch (6). The floating foil frame automatically adapts to your skin surface for a close, smooth shave.

For pre-shaving after a few days of not having shaved, use the long hair trimmer (4) to pre-cut long hairs. For a close, smooth shave, finish with the foil.

Trimming

Push out the long hair trimmer (a). It allows controlled trimming of moustache and sideburns. It evenly cuts and trims larger areas: ideal for shaping sideburns, moustaches and partial short beards.

Frequent use of the long hair trimmer may reduce the battery capacity.

Tips for the perfect shave

- We recommend that you shave before washing, as the skin tends to be slightly swollen after washing.
- Hold the shaver at right angles (90°) to the skin. Stretch the skin and shave against the direction of beard growth.
- To maintain 100% shaving performance, replace your foil and cutter block at least every 18 months or when worn.

Cleaning



This appliance is suitable for cleaning under an open water tap.

Warning: Detach the hand-held part from the power supply before cleaning it in water.

Regular cleaning ensures better shaving performance. Rinsing the shaving head after each shave under running water is an easy and fast way to keep it clean:

- Switch the shaver on (cordless) and rinse the shaving head under hot running water (b). A natural based soap may also be used provided it contains no particles or abrasive substances. Rinse off all foam and let the shaver run for a few more seconds.
- Next, switch off the shaver, remove the shaver foil and the cutter block. Then leave the disassembled shaving parts to dry.

Alternatively, you may clean the shaver using the brush provided (c):

- Switch off the shaver. Remove the shaver foil.
- Using the brush, clean the cutter block and the inner area of the shaver head. However, do not clean the shaver foil with the brush as this may damage the foil.

Keeping your shaver in top shape

About every four weeks, clean the cutter block with Braun cleaning agents. Put a drop of light machine oil onto the long hair trimmer and the shaver foil (d).

Replacing the shaving parts

To maintain 100% shaving performance, replace your foil and cutter block at least every 18 months or when worn. Change both parts at the same time for a closer shave with less skin irritation.
(Shaver foil and cutter block: 1000 series)

Preserving the batteries

In order to maintain the optimum capacity of the rechargeable batteries, the shaver has to be fully discharged (by shaving) every 6 months approximately. Then recharge the shaver to full capacity. Do not expose the shaver to temperatures higher than 50 °C for extended periods of time.

Environmental notice

This appliance is provided with nickel-hydride rechargeable batteries. To protect the environment, do not dispose of this appliance in the household waste at the end of its useful life. Open the housing as shown on page 10, remove and dispose of the batteries at your retail store or at appropriate collection sites according to national or local regulations.

Subject to change without notice.

This product conforms to the European Directives EMC 89/336/EEC and Low Voltage 73/23/EEC.



For electric specifications. see printing on the special cord set.

At the end of the product's useful life, please dispose of it at appropriate collection points provided in your country.



